


113-UVL-3-30

Bohrlochhöhen für Schraubhaken, Anschlussmaße und Abflusshöhen
drilling point for screw hooks, dimensions for mounting and drain

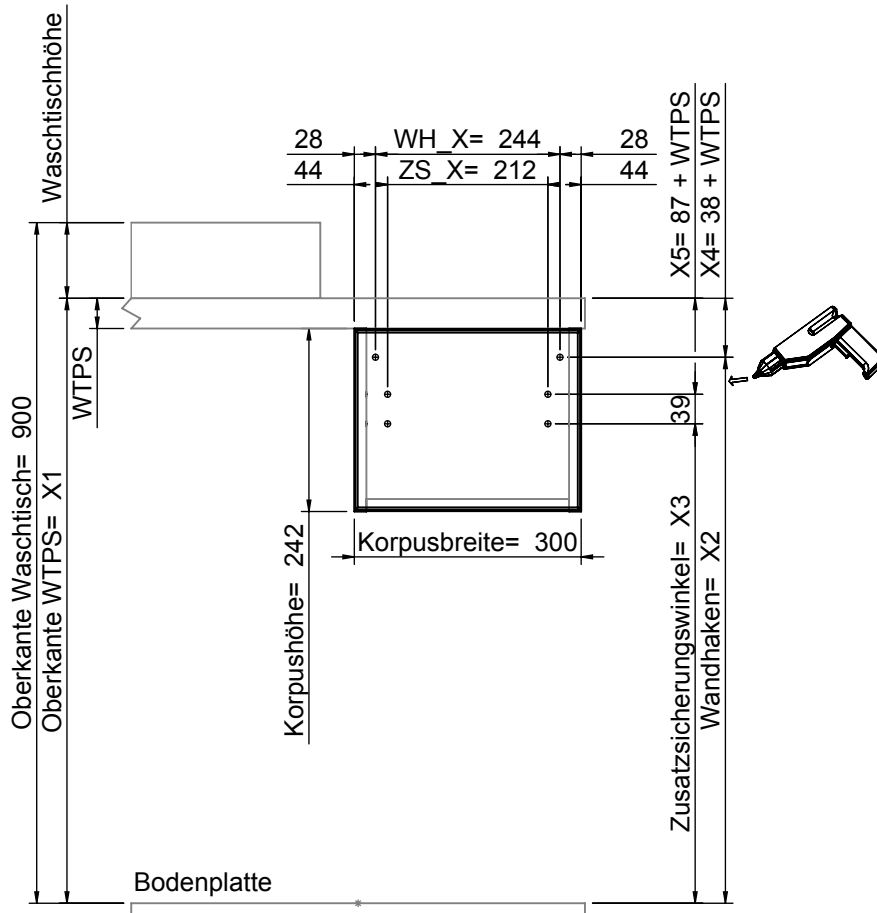

X1 = 900 mm - Waschtischhöhe
 X2 = 900 mm - Waschtischhöhe - X4
 X3 = 900 mm - Waschtischhöhe - X5 - 39
 WTPS = Waschtischplattenstärke
 ZS_X = Zusatzsicherungswinkel
 WH_X = Wandhaken



Der Elektroanschluss ist nur vom Fachmann nach DIN EN 60364 durchzuführen!

**VORSICHT**

Diese Hinweise dienen der Vermeidung von Sach- und Personenschäden
 Bei Missachtung und daraus entstandenen Schäden übernehmen wir keine Haftung.

- Die Montage muß durch fachkundiges Personal erfolgen.
- Beachten Sie die beiliegenden Montageanleitungen.
- Montieren Sie bei Waschtischunterschrank die beiliegenden Zusatzsicherungswinkel

HINWEIS: Technische Änderungen und Irrtümer vorbehalten! Aktuellster Stand auf www.artiqua.de



Connection to power supply should be carried out only by a qualified technician
 and according to both IEC60364 and national regulations in force!

**CAUTION**

These instructions are intended to prevent personal injury or property damage.

We will not be held responsible in case of disregard.

- Assembly must be carried out by skilled personnel.
- Take notice of enclosed installation instructions.
- Assemble the included additional safety brackets for vanity base cabinets.

NOTICE: Technical changes and errors reserved! Latest status at www.artiqua.de