


## 113-UVL-2-90

Bohrlochhöhen für Schraubhaken, Anschlussmaße und Abflusshöhen  
drilling point for screw hooks, dimensions for mounting and drain

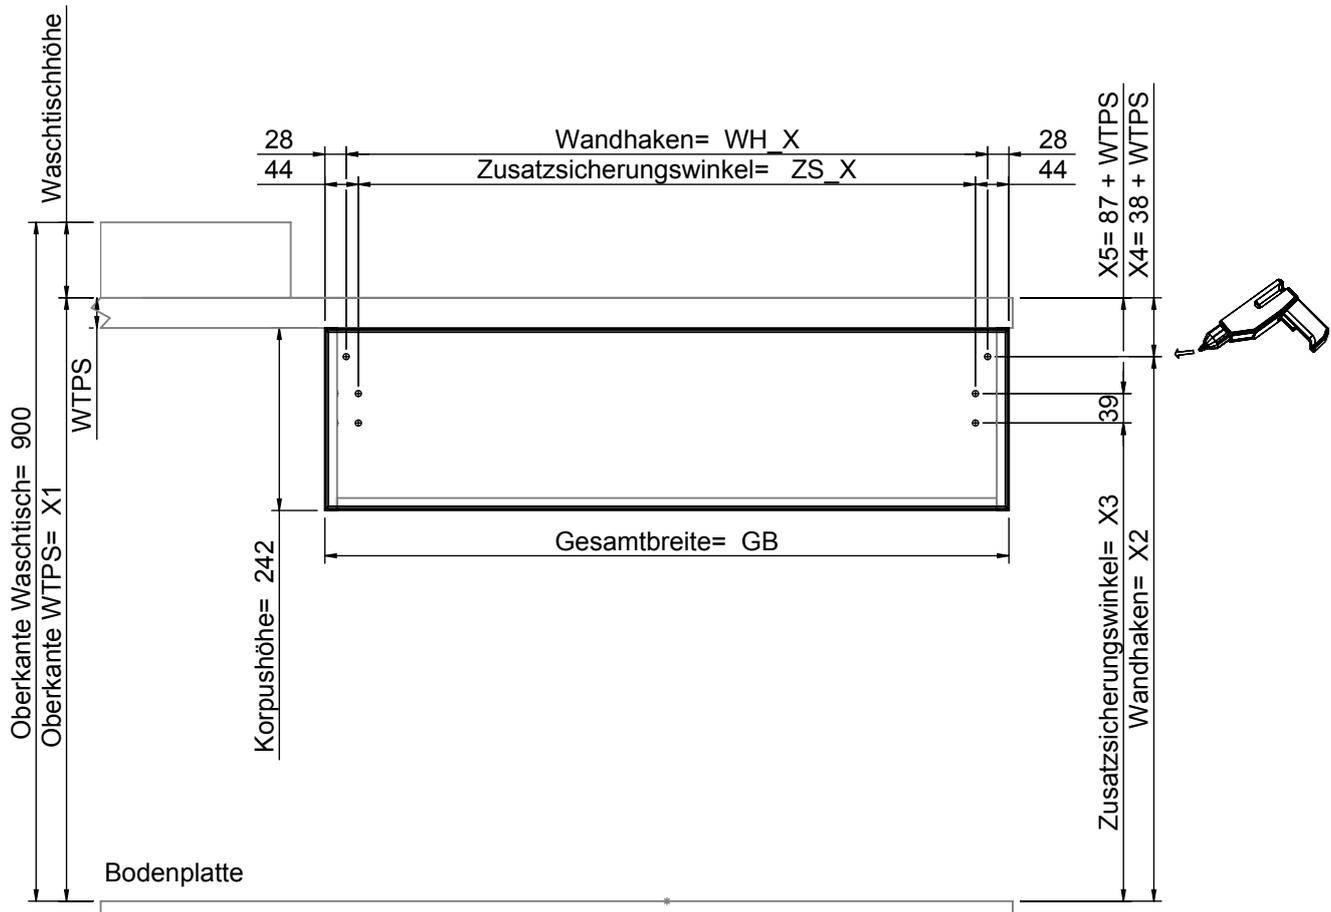

X1 = 900 mm - Waschtischhöhe  
 X2 = 900 mm - Waschtischhöhe - X4  
 X3 = 900 mm - Waschtischhöhe - X5 - 39  
 WTPS = Waschtischplattenstärke  
 ZS\_X = Korpusbreite - (2\* 44mm)  
 WH\_X = Korpusbreite - (2\* 28mm)



Der Elektroanschluss ist nur vom Fachmann nach DIN EN 60364 durchzuführen!

**VORSICHT**

Diese Hinweise dienen der Vermeidung von Sach- und Personenschäden  
 Bei Missachtung und daraus entstandenen Schäden übernehmen wir keine Haftung.

- Die Montage muß durch fachkundiges Personal erfolgen.
- Beachten Sie die beiliegenden Montageanleitungen.
- Montieren Sie bei Waschtischunterschrank die beiliegenden Zusatzsicherungswinkel

**HINWEIS: Technische Änderungen und Irrtümer vorbehalten! Aktuellster Stand auf [www.artiqua.de](http://www.artiqua.de)**



Connection to power supply should be carried out only by a qualified technician  
 and according to both IEC60364 and national regulations in force!

**CAUTION**

These instructions are intended to prevent personal injury or property damage.

We will not be held responsible in case of disregard.

- Assembly must be carried out by skilled personnel.
- Take notice of enclosed installation instructions.
- Assemble the included additional safety brackets for vanity base cabinets.

**NOTICE: Technical changes and errors reserved! Latest status at [www.artiqua.de](http://www.artiqua.de)**